




A Quick Look at your DVR

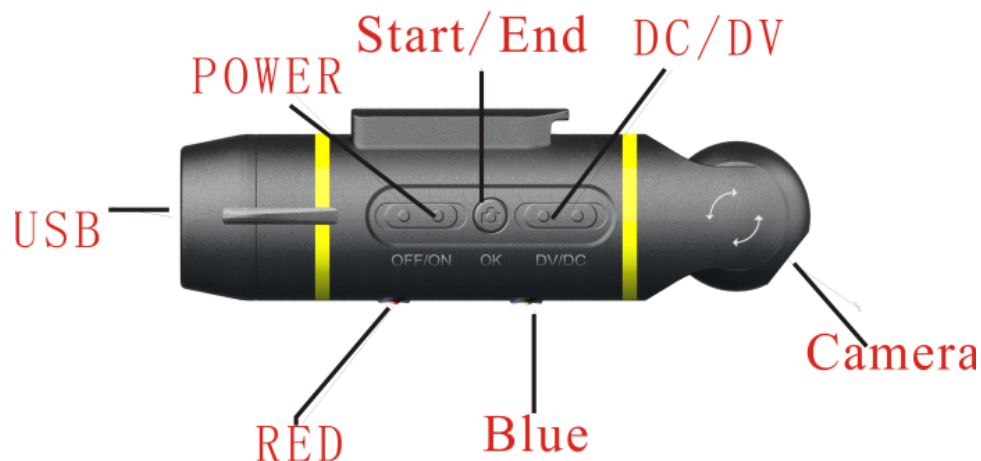

Operating Instructions

- 1) Turn on the Bullet Cam: Press the ON/OFF button, the RED and BLUE LED will be on. After 5 seconds, the RED LED will remain lit and the BLUE LED will be off, which indicates the Bullet Cam is ready.
- 2) DV Mode: Push the DV/DC button to DV, then Press the OK button. The Blue LED will keep flashing, which means it has begun recording; Press OK button again the Bullet Cam will save video file to integrated Flash memory, and the BLUE LED will turn off.
- 3) DC Mode: Push the DV/DC button to DC, then Press the OK button. The Blue LED will stay lit, which means it begins taking photo automatically and continually. (There is a "Taking photo Time Setting" software in CD, you can set the delay between photos, for example, take a photo every 15 seconds. The minimum intervals is 10 seconds, Max is 300 seconds.) Press OK button again, Fly DV will save these photo files to integrated Flash memory, and BLUE LED will turn off.
- 4) Fly DV will save DV/DC files automatically when the power is low, then turn it off.
- 5) The RED LED will flash when charging, and will remain lit when fully charged, please charge it with AC adapter, do not use your PC to charge the Bullet Cam.
- 6) 1GB-4GB flash is optional
- 7) Get and open Video /Photo files by connecting the Bullet Cam to PC via USB cable.
- 8) High performance MIC
- 9) USB 2.0 with PnP
- 10) Support the following OS: WINDOWS98/98SE/ME/2000/XP/MAS OS/ LINUX
- 11) Recording file format: 352X288 AVI
- 12) Photo file format: 1280x1024 JPEG