



## Instructions for CD300 Camera Detector



### Welcome

Thank you for purchasing the new top of the line CD300. The following product manual will help you to install and operate your new device. Please be sure to fully read the directions before proceeding to use your new CD300.

### Battery Installation

Open the latch on the side of your CD300 and you will see space for 4 batteries as well as + and – indicators. Please be sure that you insert the batteries according to these symbols.

### Operation

- 1.) To turn your camera detector on, simply push the switch on the front to the right, a red light should come on indicating that the unit has power.
- 2.) To begin detecting cameras, simply place the viewfinder to your eye and look around the surrounding area. Anywhere that a camera lens is detected you will see a bright flashing red light.

3.) Depending on where you are looking during your scan, you may need to adjust the focus on your CD300. This is done simply by gently grasping the eyepiece and slowly twisting it around until the image is clear.