



Instructions for HS10000 PT - Pan Tilt Monitor



Welcome

Thank you for purchasing the new top of the line HS10000 PT. The following product manual will help you to install and operate your new device. Please be sure to fully read the directions before proceeding to use your new HS10000 PT.

Installation

- 1.) Place the camera in your desired location.
- 2.) Plug the camera into a standard wall outlet via the included power adapter.
- 3.) Slide the power switch to the **ON** position. The power indicator lights should light up.
- 4.) Either connect the receiver via the power adapter or load 4 AAA batteries into the battery compartment, being sure to match the polarities. Slide the power switch to the **ON** position. (Note: If you both place batteries and plug the unit it, it will draw power from the adapter instead of the batteries. Please remove the batteries if left unused for long periods of time.)

5.) Set the channel on the receiver unit to be the same as that of the camera by pressing the **CHANNEL** button continuously; the picture will be displayed on the LCD screen. (Note: For improved clarity, please connect the receiver to a monitor or TV with AV cables.)

6.) On the side of the receiver you will find a volume control roller as well as a brightness control roller. Adjust both volume and brightness to desired level.

Receiver Remote Control Function

The receiver can remotely control the power and direction of the camera, please follow the directions below for use.

Remote control of camera's power

1.) Press the **CTRL** button to turn on/off the LCD screen and keep voice enabled.

2.) Press and hold the **CTRL** button for three seconds to turn on/off the camera remotely.

- Note: The channel indicator will indicate which camera you are remote controlling. Ex: If the display on the receiver lights up CH1, then the camera at CH1 will be controlled.

Remote control of the camera's direction

1.) Press the **AUTO** button once on the receiver to activate the camera's automatic horizontal rotation for a period of time.

2.) Press the ◀/▶ buttons on the receiver to rotate the camera horizontally manually. The maximum angle is 270°.

3.) Press the ▲/▼ buttons on the receiver to rotate the camera vertically. The maximum angle is 120°.

Channel looping setup

- 1.) The receiver supports up to 3 cameras working at the same time. You can press and hold the **CHANNEL** button on the receiver for 2 seconds to enable the automatic looping function. The channels will be shown and then cycled through to the next channel every 8 seconds.
- 2.) Press the **CHANNEL** button on the receiver again to exit the looping function.
- 3.) You can then once again press the **CHANNEL** button to manually select a channel.