



## Instructions for Watch DVR



### Welcome

Thank you for purchasing the new top of the line Watch DVR. The following product manual will help you to install and operate your new device. Please be sure to fully read the directions before proceeding to use your new Watch DVR.

## Operation

- 1.) Before using this product please ensure that all accessories were included in the packaging and that the product is fully charged before use.
- 2.) To turn on the Watch DVR press down the Power on/off button firmly. The blue work indicator light should turn on for a few moments and then go out, it will blink every two seconds while it is in this standby mode to let you know that the device is working.
- 3.) To take a picture simply press down the Start/Pause button once and a picture will be taken.
- 4.) To begin taking video, press down the Start/Pause button and hold it briefly. The blue light should come on and stay on as long as the Watch DVR is recording.
- 5.) Pressing and holding the Start/Pause button once more will stop recording and the Watch DVR will go into standby mode once more.
- 6.) When the Watch DVR's internal memory begins to fill the blue indicator light will begin to flash rapidly. This means that you will need to hook the Watch DVR to the PC to copy your data over and free up space in the internal memory.

**Note:** If the Watch DVR is left untouched in standby mode for longer than 10 minutes it will automatically turn itself off to help conserve battery life.

## Data Transfer

- 1.) Plug the USB cable into your computer and attach the other end to the Watch DVR via the USB interface.
- 2.) Your operating system should automatically "see" the Watch DVR allowing you to access the files on it. The Images folder will contain all of your still images, while the Video folder will likewise contain all of your video footage. **Note:** On some operating systems if the Watch DVR is not auto detected you may need to briefly press down the power button on the watch, once it is activated your OS should detect the device automatically.

## **Recharging**

- 1.) When your Watch DVR's battery begins to get low, the blue indicator light will flash rapidly, indicating that it needs to be recharged. To charge the device, simply connect it to your PC exactly the same as you do when you are accessing the data on the device.
- 2.) While the Watch DVR is charging, the indicator light will slowly flash. Upon completely charging the blue indicator light will turn off, indicating a full charge.

## **Resetting the Watch DVR**

If your Watch DVR stops responding, or if the computer does not automatically recognize the device when it is on, please take a pin or other small object and insert it into the reset button hole, pressing the button inside down gently. This will reboot the device and should return it to a proper functioning state.