


AIR WATER ICE, INC.

Installation Diagram

Float Valve Assembly

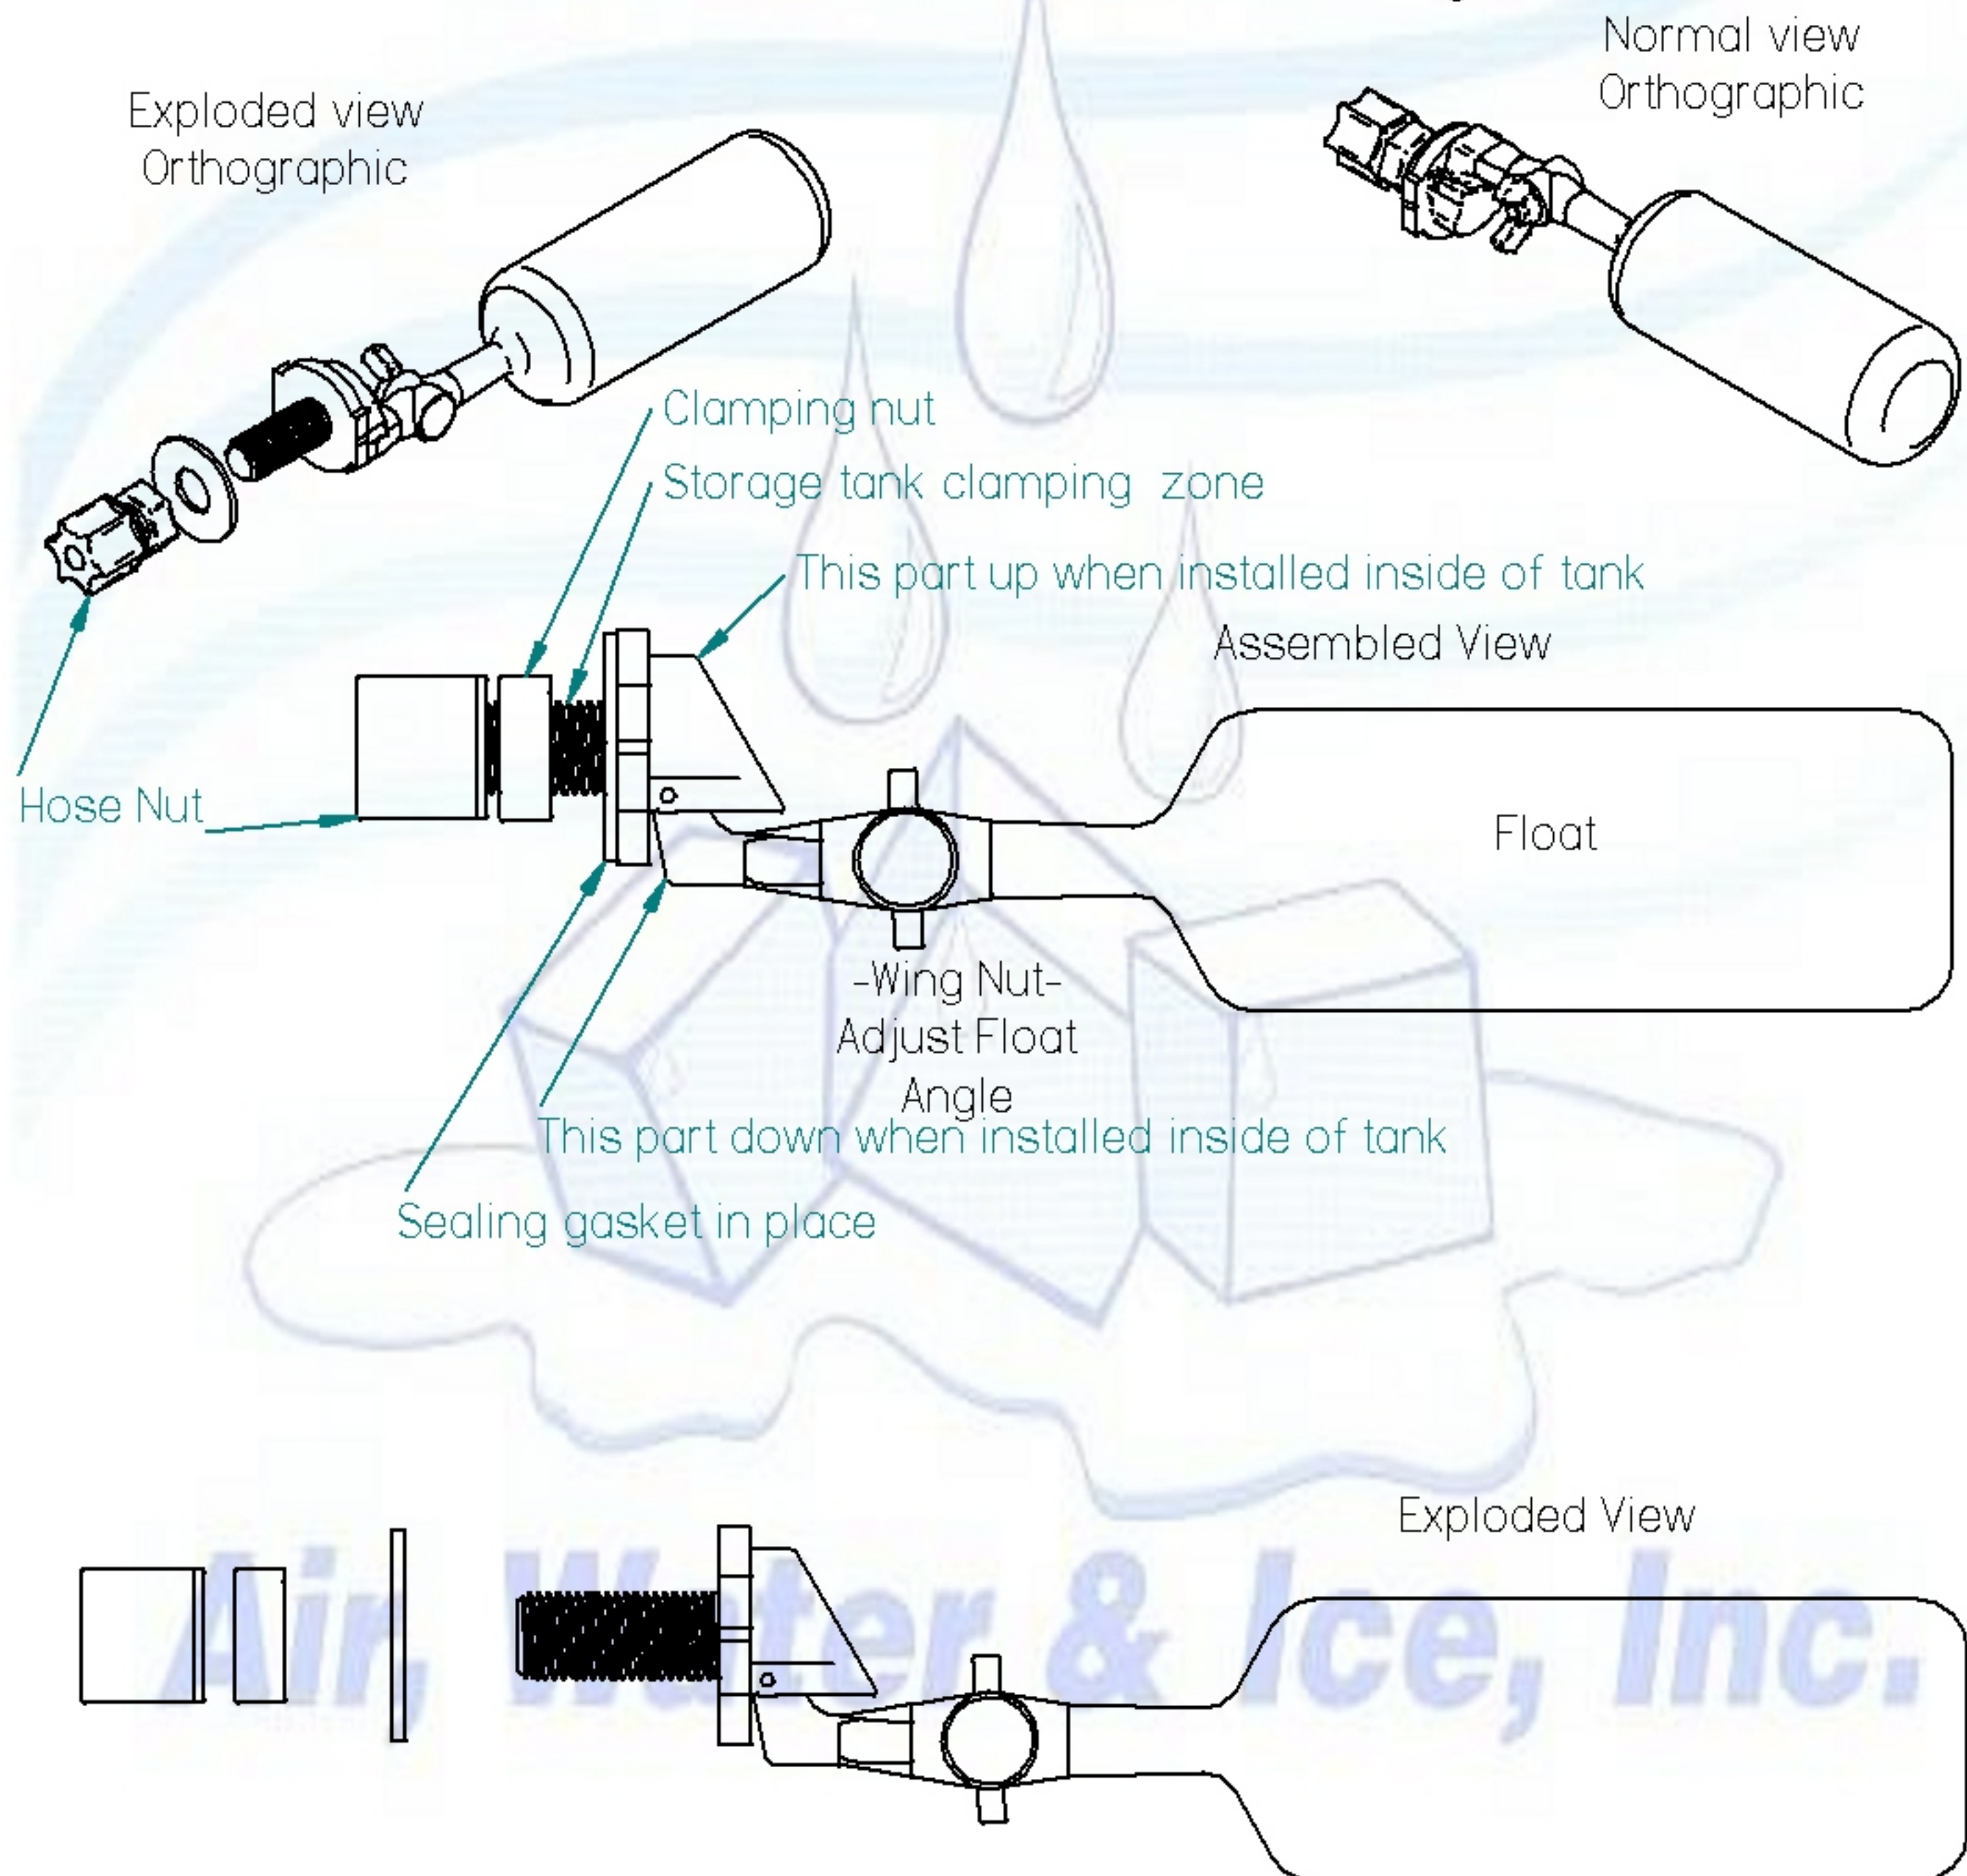

*****Warning!!** Improper installation of float valve can and will prevent shutoff, causing flooding!!! Monitor installation until you have positive shutoff on system

***Note:** It is best to adjust float so it is hanging slightly down. Water will lift and close.