

WAR HAMMER ASSEMBLY INSTRUCTIONS

What you will need:


- Lead Loaded Mallet
- Drill with 1/32" Bit
- Awl or Scribe
- Wood Glue
- Tape

[1., 2.] take the small end of the handle and push it through the "eye" of the head as far as it will go. [3.] Next, take a heavy lead loaded mallet and drive the handle as far down through the eye as it will go. Once the handle is tightly driven on, it is time to fit the langets. Take the flat end of each langet and fit it tightly up against the eye. It then can be momentarily held in place with tape.

[4.] Next, use an awl or scribe to mark your location holes for the screws.

[5.] Remove the langets and drill the holed using a 1/32" (approx) drill bit. Once the holes are drilled, you can put the langets back in place with a piece of tape.

[6.] Once the langets are in place, insert the screws making sure the threads are generously coated with white wood glue and turn them snugly. Remove the tape and your War Hammer is ready to go!

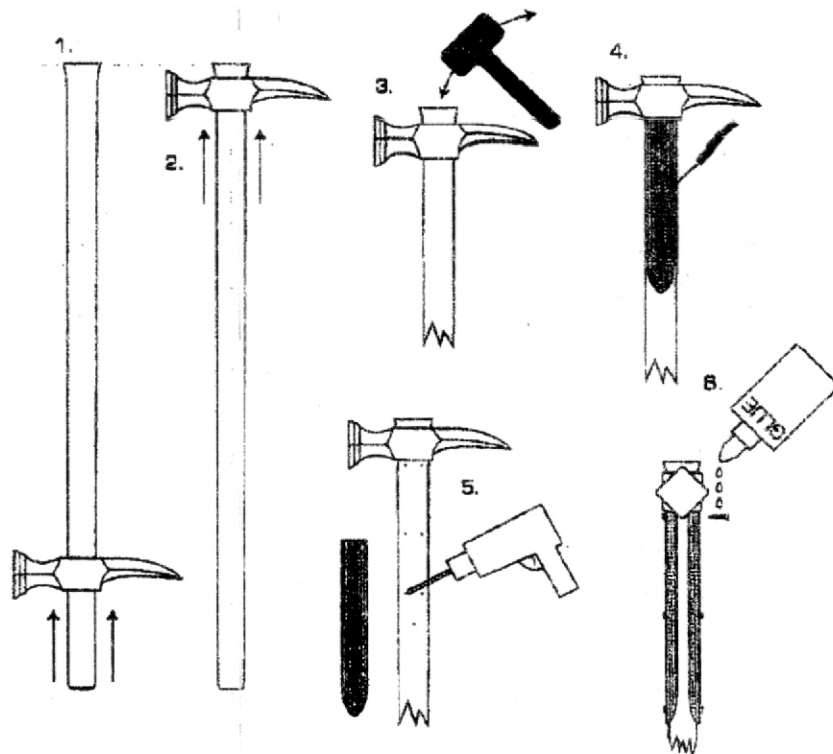

COLD STEEL®
World's Strongest, Sharpest Knives