




Removing the panels is the best way. The release tab for the connector is on the bottom; using a long screwdriver, reach up under and remove the connector.



As a point of reference, the panels removed were: upper left (where CAN AM appears) on the left side and right side (makes it easier to re-install the 'lobster'); the center 'lobster' (looks like a

lobster when you have it off); the left faring around the fog light, or regular faring if you don't have the fog lights installed.

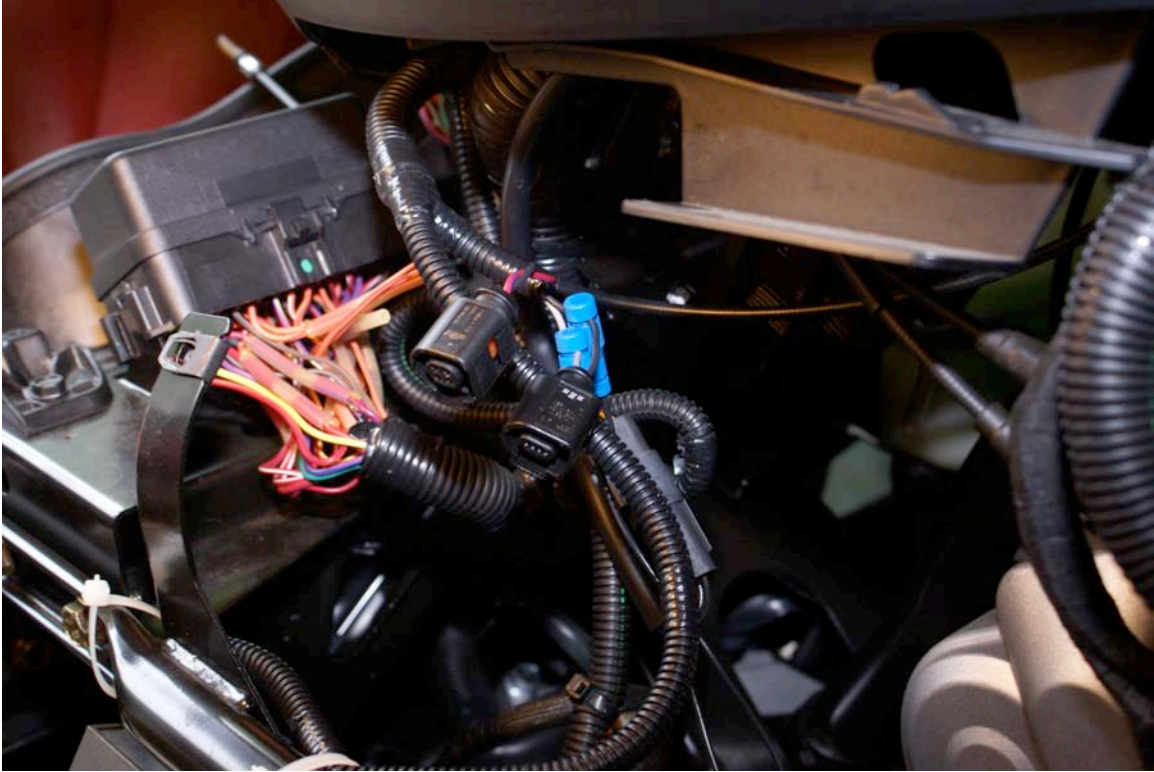

Mount the transmitter to the frame (just at the bottom of the picture). Tap the gray wire and black wire for the high-beam shutter as shown above (by the high-beam shutter connector). One key item; the lights don't have power until the engine is running.