


Fashion Bed Group

A Division of Leggett & Platt Incorporated
5950 West 51st Street - Chicago, IL 60638

Part List for Salem I Daybed

PART# 340101 HARDWARE FOR DAYBED

- (1) 6mm X 79mm PHILLIPS HEAD SCREW-8
- (2) 6mm X 28mm PHILLIPS HEAD SCREW-4
- (3) 13mm OD X 6mm ID FLAT WASHER-12
- (4) 6mm ID SPRING WASHER-12
- (5) 16mm OD X 6mm ID FLAT WASHER-8
- (6) 6mm HEX NUT-8
- (7) 6mm ID RUBBER WASHER-8
- (8) OPEN WRENCH-1

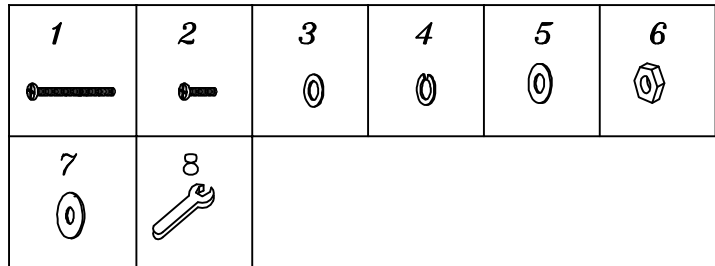

Instructions

SAVE ALL PACKAGING MATERIALS UNTIL PRODUCT IS FULLY ASSEMBLED. HARDWARE AND SMALL PIECES MAY NOT BE SEEN AND BE ACCIDENTALLY DISCARDED WITH PACKAGING MATERIALS.

NOTES

- (1) For easy assembly, you will need a helper.
- (2) Don't completely tighten bolts until link spring and back panel have been assembled to sides.
- (3) After assembly tighten all bolts.

STEPS

- (A) Loosley bolt one end of the link spring to one daybed side. Use 4 screw (1), 4 metal washers (3), 4 rubber washers (7), 4 metal washers (5), 4 spring washer (4), and 4 hex nuts (6). (See Fig. 1)
- (B) Repeat Step (A) for second daybed side. Loosely tighten
- (C) Bolt one end of the daybed back to one side. Insert 2 screws (2), 2 spring washer (4) and 2 metal washer (3) through back rails then into threaded inserts in back post. (See Fig. 1)
- (D) Repeat Step (C) for second end of daybed back.
- (E) Tighten all bolts.
- (F) You are now ready for mattress installation.

FOR ASSISTANCE IN ASSEMBLY ONLY OF THIS PRODUCT. CALL OUR HELP DESK AT 1-800-324-3415, BETWEEN 8:30 AM & 4:30 PM CENTRAL TIME MONDAY THRU FRIDAY. PLEASE HAVE THE STYLE NUMBER AVAILABLE BEFORE YOU CALL. (STYLE # OR NAME CAN BE FOUND ON PACKING CARTON OR SALES RECEIPT.) OUR PRODUCT IS INSPECTED TO ENSURE IT IS IN GOOD CONDITION. IF YOUR FURNITURE APPEARS TO HAVE BEEN DAMAGED IN SHIPMENT OR YOU ARE IN NEED OF REPLACEMENT PARTS PLEASE CONTACT THE DEALER FROM WHOM YOU PURCHASED THE PRODUCT.

Fashion Bed Group

A Division of Leggett & Platt Incorporated
5950 West 51st Street - Chicago, IL 60638

Instruction Sheet

