

Scale Calibration

In the event that the scale loses accuracy, recalibration may be required. Recalibration is required if the load cell of the scale is overloaded due to dropping something heavy on the scale, or dropping it.

If the scale did come from a colder or warmer environment, wait for some time for the scale to be at the same temperature as your current environment.

Plug in the DC power supply at the back of the scale.

Press the **ON TARE** key and hold it for about 7~9 seconds. The scale will enter the calibration mode. "E0" will be displayed on the LCD. Press

ON TARE again (within 4 seconds of the display of "E0") and the display will change to "E1". Once the "E1" is displayed on the LCD, wait until the scale displays the base frequency. The base frequency (*without anything on the platform*) should be between 4000~12000.

If the displayed number is below 4000 or over 12000, it must be adjusted at the internal potentiometer around 7500. (To access this adjustment the scale must be opened and this should only be done by a qualified technician)

If the base frequency (0kg frequency) is not in the range of 4000~12000 the scale may not proceed with the calibration.

Note: In most cases all that has to be done is to turn off the scale and use it.

CAUTION: The following can only be done if you have calibration weights:

Wait for sometime and "01" is displayed. Put 5oz on the platform and wait. "0E" appears on the display indicating the end of the calibration. Turn the scale off. Calibration is completed.

Scale Specifications

- Operates from either a 9V alkaline battery or 9V included AC adapter
- Load cell Technology
- Liquid Crystal Display (LCD)
- Capacity 200g / 7OZ
- Graduation 0.01oz
- Tare function up to the scale's overload range.
- Auto shutoff after 4 minutes while on battery
- Switch able to gram mode (200g/0.1g)

**SCALES
USA
PW5200**

Electronic Digital Scale

Max. 70Z, d=0.01oz

Operating Instructions



Unpack and assemble your scale

Unpack your scale and remove protective insertion (if any) in between the platform and the upper case of the scales.

Using the Supplied AC Adapter

Connect the AC adapter into the power jack on the rear of the scale and plug it into an outlet. It is advisable to remove the battery when using AC power


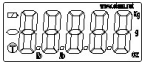
Using Scale with Batteries

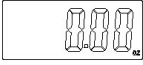
You will require 1 new 9V alkaline leak proof battery. Remove the battery compartment cover underneath the scale and connect the battery. Insert the battery into the compartment making certain that the wiring is not placed in tension. Replace the battery compartment cover. Remember to remove the battery if the scale is to be stored for a long period of time, or if AC power is to be used.

Operate on a Firm, Flat, Level surface



In order to operate correctly, the scale must be installed on a firm, level, flat surface.


Weighing an Item

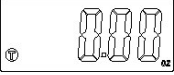
Press the  key. The number  will appear on the display for a short time while the scale performs a self-checking / zero routine

and then  displays on the display. Your scale is now ready to weigh an item. Place an item on the scale and the weight will register on the display after a short delay.


Use of the TARE/ZERO Function


1. To reset the scale to read 0.00_{oz} press the  key.
2. When you wish to weigh only the contents of a container, you can remove the weight of the container from the display by pressing the  key as follows.

- Place the container on the scale and press the  key.
(Note: Pressing this key for long time will toggle the display mode between oz and gram)

- The scale should now display 
- Then place the item or material to be weighed into the container. The scale will now show the weight of the item or material in the container and exclude the weight of the container.

Error Messages


If an  symbol appears in the display, this means that the weight capacity of the scale has been exceeded.

If a  sign appear on the upper left side of the LCD, this means that the low input voltage (less than 7V).

Operating Temperature

The scale is designed to operate in a normal room temperatures. If subjected cold or warm temperatures, it should be allowed to reach room temperature before operating.

Toggling between gram and lb-oz mode

When the scale is turned on in the oz mode, press  key for about 5~7 seconds, the display will change to gram mode and vice versa.
(Note: If the ON/TARE key is pressed for short time the scale will tare the weight placed on the platform)